

Question (11.01.2019.)

May you please advise the required safety factor for the actuator sizing?

Answer (11.01.2019.)

Valves operator shall be sized to operate the valve at any pressure differential across the valve, equal to the power, gas pressure, up to the full rated differential pressure of the valve, including lifetime factor and ambient temperature, with a 33% additional torque safety factor.